



## INSTALLATION INSTRUCTIONS FOR MINI-SERIES PRESSES

1. Lubricate cylinder bore and shafts with petroleum jelly or equivalent.
2. Use filter and lubricator "FOG TYPE" with a non-detergent oil.
3. Use the appropriate valve to operate press, see chart below.
4. Minimum supply air line should be nominal 3/8" I.D. hose or tubing.
5. Operating air pressure from 50 to 100 PSI.
6. Quick exhaust valve is recommended for the MP-5 and MP-5-W.

Model #	Valve Size
MP-3	1/4"
MP-4	3/8" or 1/2"
MP-5	3/8" or 1/2"
MP-5-W	3/8" or 1/2"

